



SMU DVR

Your guide to getting the most from
SMU TV

Go to www.shawano.tv for a detailed instruction manual

Select: "Print Forms & Manuals" then "AmiNet530 DVR Manual"

DVR Recording Basics

- Your DVR receiver allows you to record two programs at the same time, while watching one of the two recorded programs.
- Access your saved programs anytime by pressing **Menu** and selecting **PVR**.
- Easily manage your recordings to make space for new ones and protect the ones you want to keep.
- Pause, replay, and fast-forward the program, just like a videotape or DVD.

Remote Functions

- *Using The Playback Buttons On Your Remote.*

The familiar playback buttons on your remote can be used to control the video.

- Press **FF** to move forward quickly or **SKIP** to fast-forward in 30-second increments.
- Press **REW** to rewind quickly or **BACK** to skip backward in 1-minute increments.
- Press **FF** or **REW** up to four times to go forward or back at increasing speeds.
- Press **PAUSE** to freeze the program. Press **PAUSE** again or **PLAY** to resume play.

Manage Your Recordings

- *Schedule A Recording*

1. Press **GUIDE**.
2. Highlight desired program.
3. Press **RECORD**. (a red dot appears on left side of scheduled program)
4. Press **EXIT**.
5. After program is done recording it will be saved under the program title.

- *Cancel A Scheduled Recording*

1. Press **GUIDE**.
2. Highlight scheduled program.
3. Press **STOP**. A message box appears “The program you have selected is currently scheduled to record. Would you like to cancel the recording?”
4. Arrow right and highlight Yes.
5. Press **OK**. (red dot disappears)
6. Press **EXIT**.

Manage Your Recordings

- *Record A Program Everyday, Every M-F, or Weekly.*
 1. Press **GUIDE**.
 2. Highlight desired program.
 3. Press **OK**. A Schedule event box appears.
 4. Use up/down, left/right arrows to highlight Freq: *Single*.
 5. Press **OK**.
 6. Use up/down arrow to select *Single, Everyday, Every M-F, or Weekly*.
 7. Press **OK**. To register selection.
 8. Use up/down, left right arrows to move onto OK box.
 9. Press **OK**. (Two red dots appear to the left of the program scheduled, indicating multiple recordings of program at scheduled times)
 10. Press **EXIT**.

Manage Your Recordings

- *To Cancel A Multiple Scheduled Program.*
 1. Press **GUIDE**.
 2. Highlight scheduled program.
 3. Press **OK**. Message box appears “What would you like to do with selected program”.
 4. Arrow up/down and highlight CANCEL RECORDING.
 5. Press **OK**. Message box appears “The program you have selected is currently scheduled to record. Would you like to cancel the recording?”.
 6. Arrow right and highlight YES.
 7. Press **OK**. (The two red dots disappear on the left of program)
 8. Press **EXIT**.

Manage Your Recordings

- *View Your Recording Schedule.*
 1. Press **Menu** and selecting **PVR**.
 2. Under PVR. Use the up/down arrow to select TO RECORD.
 3. Press **OK**. Scheduled recordings are displayed.
 4. Use up/down arrow to select program.
 5. Press **OK**, to cancel recording or edit schedule.

- *View List Of Previously Recorded Shows.*
 1. Press **Menu** and selecting **PVR**.
 2. Under PVR. Use the up/down arrow to select RECORDINGS.
 3. Press **OK**.

Manage Your Recordings

- *Watch A Recorded Program.*
 1. Press **Menu** and selecting **PVR**.
 2. Under PVR. Use the up/down arrow to select RECORDINGS. Press **OK**.
 3. Use the up/down arrows to select the program you'd like to watch. Press **OK**.
 - Select *Play Recording* to watch the program.
 - Select *Resume Play* to begin play at the point where you previously stopped watching.
 4. When a recording is finished playing, live TV starts automatically.

- *Stop Playing A Recorded Program.*
 1. Press **STOP** at any time during a recording, live TV starts automatically.

Manage Your Recordings

- *Delete Existing Recordings*

Manually deleting unwanted recordings from your DVR ensures that you keep what you want. Otherwise older programs are erased automatically to make room for new recordings when DVR storage limit is reached.

1. Press **Menu** and selecting **PVR**.
2. .
3. Under PVR. Use the up/down arrow to select RECORDINGS.
4. Press **OK**.
5. Use the up/down arrows to select the program you'd like to delete.
6. Press **OK**. A message box appears. "Choose an Action"
7. Use up/down arrows to select Delete Recording.
8. Press **OK**. Message box appears "Delete?"
9. Use side arrows to select YES.
10. Press **OK**. Recording is deleted.

Managing Your Recordings

- *Preventing Existing Recording From Being Deleted*

Note: This only prevents the recording from being automatically deleted when DVR storage limit is reached. The recording can still be deleted manually.

1. Press **Menu** and selecting **PVR**.
2. Under PVR. Use the up/down arrow to select RECORDINGS.
3. Press **OK**.
4. Use the up/down arrows to select the program you'd like to save.
5. Press **OK**. A message box appears. "Choose an Action"
6. Use up/down arrows to select Lock.
7. Press **OK**.

Pause, play, replay, and record live TV

- *Pausing / Restarting a Program*

1. To temporarily stop a live TV program, press **PAUSE**.
2. A progress bar will appear onscreen, showing you how much time has elapsed and time until play resumes, The action will freeze for up to 90 minutes.
3. Press **PLAY** at any time to restart the program from where you left off.

- *Replaying What You Missed*

1. Press **REW** to “rewind” the program you’re watching. A progress bar appears to indicate how far you can go back in time.
 - Press **REW** up to four times to rewind at increasing speeds.
 - Press **BACK** to skip back in 1-minute increments.
2. Press **PLAY** anytime to begin watching.

Pause, play, replay, and record live TV

- *Fast-Forwarding and Retuning to the “LIVE” Program*

If you have paused or replayed a live program, you can use the **FF** and **SKIP** buttons to go forward in time.

1. Press **FF** to fast-forward. A progress bar will appear to indicate how far you can go forward in the program.
 - Press **FF** up to four times to advance at increasing speeds.
 - Press **SKIP** to fast-forward in 30-second increments.
2. To return to “live” action, fast-forward until you reach the end of the green bar in the onscreen progress indicator, or press **LIVE TV**.

Pause, play, replay, and record live TV

- *Record What You're Watching*
 1. Press **RECORD** to begin immediately recording the program you're watching.
 2. The record LED will light up red on the receiver until recording ends.
 3. Recording will stop at the program's scheduled end time.
 4. Press **STOP** to end the recording at any time. A message box appears "*would you like to stop recording?*" right arrow button to YES and then press **OK**.
 5. The recording will be saved under its program title.