 
 
 


AmiNET530 Remote Control Guide





2

AmiNET530 Remote Control Guide

Contents

**Setting up the
Amino remote
control**

4

Inserting batteries

4

Childproof feature

5

Important information
about using batteries

5

**Controlling the
AmiNET530**

6

Switching on or off

6

Using the remote to
control the AmiNET530

7

**Copnfiguring the
remote control**

8

Controlling a TV

9

Controlling the DVD

9

Using the remote
control to control a TV

 
10

TV brand codes

11

DVD brand codes

17



Setting up the Amino remote control

This section explains how to unpack and set up the Amino remote control.

Your service provider may have supplied an alternative remote control, in which case please refer to the User Guide supplied by your service provider for instructions on setting up and using the remote control.

Inserting batteries

 
 
The remote control requires two batteries type AAA, MN2400, UM-4, or LR03.

 
For best performance we recommend using Alkaline batteries.

- Open the battery cover by pushing lightly on the tab and lifting up the cover:
- Insert the batteries, taking care to observe the correct polarity:
- Replace the battery cover by engaging the two tabs in the top of the case and then closing it until it clicks into place:

4

AminET530 Remote Control Guide

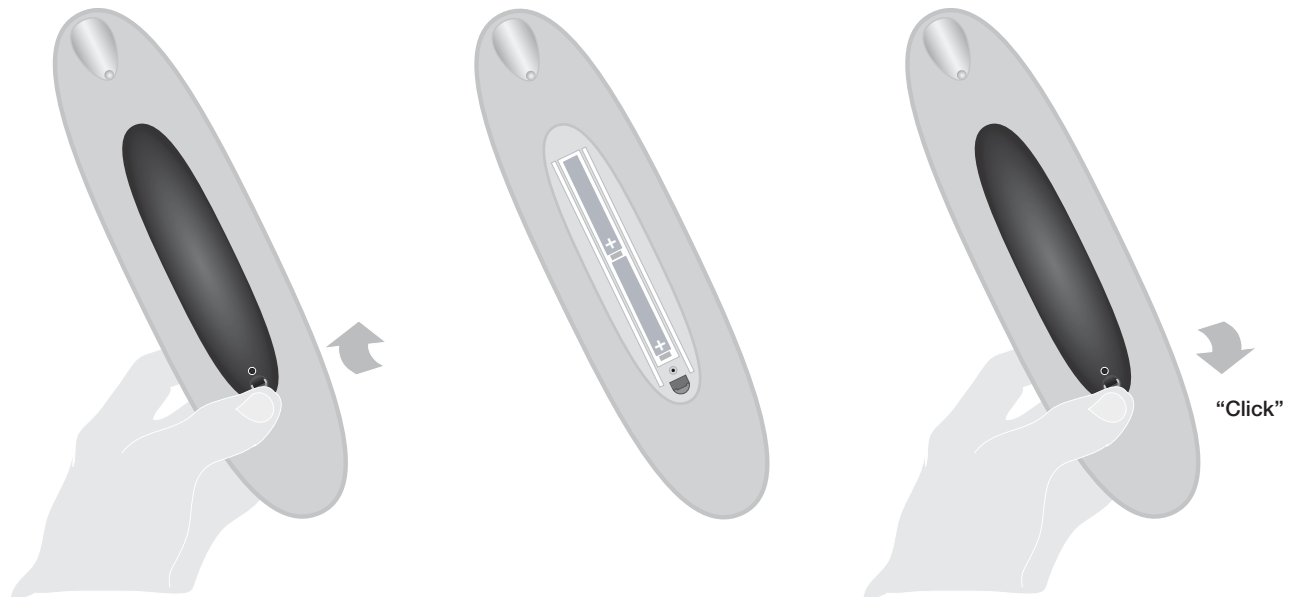




Childproof feature

You can optionally secure the battery compartment with the screw provided to prevent children from opening the compartment:

 - Remove the battery cover as described above, and using a suitable screwdriver remove the silver screw at the base of the remote control:

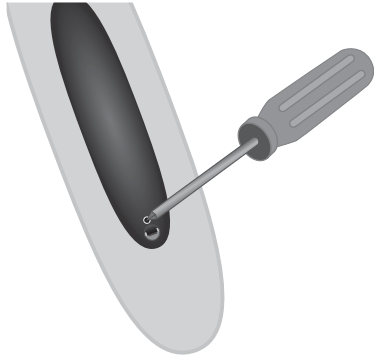

- Replace the battery cover.
- Fit the screw at the base of the cover, taking care not to overtighten it.

Important information about using batteries

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries with the remote control.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.

 
 
Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.

 
 


Caution!

Do not attempt to recharge the batteries.

Immediately remove any leaking batteries. Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.





6

AmiNET530 Remote Control Guide

Controlling the AmiNET530

To control the AmiNET530 press the **STB** button on the remote control. The **STB** mode-select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the **STB** button will light to indicate that a command is being transmitted in STB mode.

Switching on or off

 
To turn the AmiNET530 on or off:

- Press the power button on the Amino remote control.

When the AmiNET530 is switched on the status light on the front panel is on.

Using the remote to control the AmiNET530

In Set-Top Box (STB) mode, the remote can control the following functions of the AmiNET530:

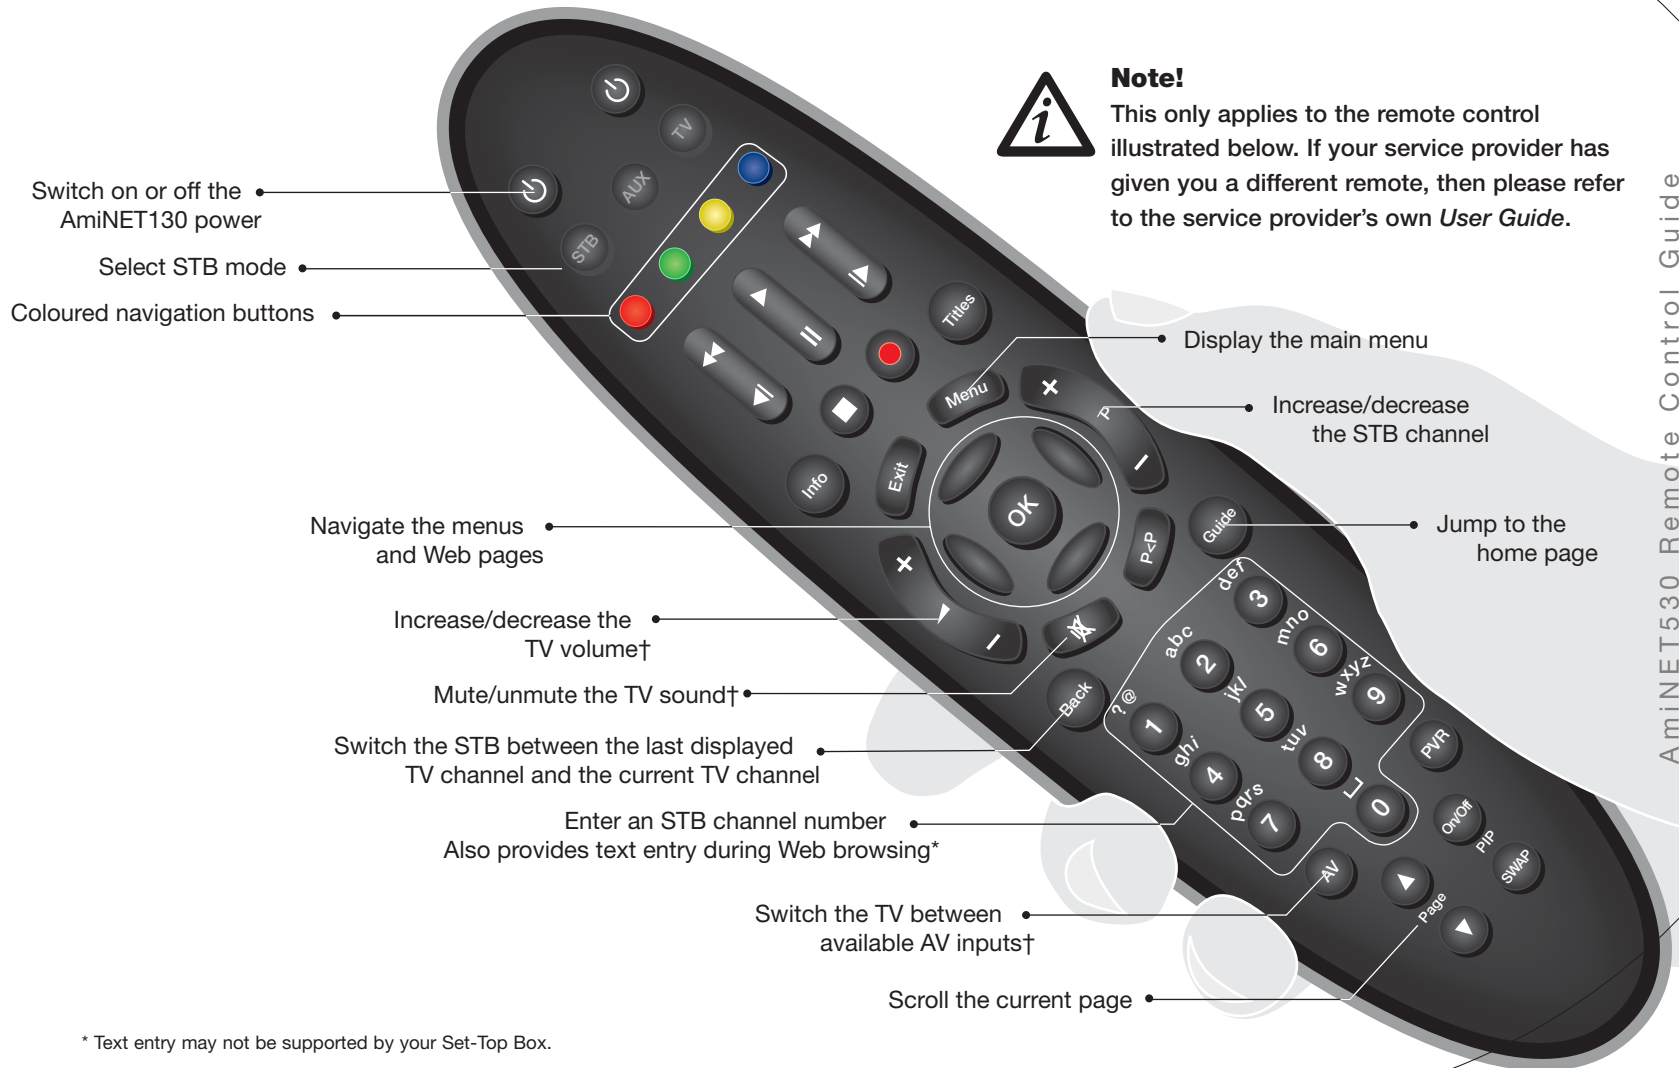

Note!
This only applies to the remote control illustrated below. If your service provider has given you a different remote, then please refer to the service provider's own *User Guide*.

AmiNET530 Remote Control Guide

* Text entry may not be supported by your Set-Top Box.
† These buttons control the TV functions in both TV mode and STB mode.

Configuring the remote control

In order for the remote to transmit the correct signals to control the TV/DVD, the remote must be programmed with a code corresponding to the type of TV in use. Below is a set of instructions for programming TV codes into the remote. To program DVD codes into the remote repeat the steps below using the DVD mode button instead of the TV mode button:

- Identify the make of the TV; e.g. Sony, Philips etc.
- Find the TV make in the TV brand code tables in this manual. Most makes of TV have more than one brand code listed, if this is the case use the steps below to try all the codes until a suitable one is found. If no brand code exists for your make of TV contact your service provider for help.
- Press the TV Mode button and hold for 2.5 seconds.

The TV button will blink twice.

- Continue to hold down the TV mode button for another 2.5 seconds.

The TV button will blink twice again

- Release TV mode button.
- Enter the 3-digit TV brand code from the list in this manual.

 
At each key press the mode button will blink.

If the TV brand code is accepted, the TV button will flash twice and go out when the 3rd digit is entered.

If the TV brand code is not accepted, the TV button will remain illuminated for 2.5 seconds and then go out. The remote will not have been programmed and the process will have to be repeated from the start.

During the programming steps if no is button pressed after 10 seconds, the TV button light will go out, the remote will not have been programmed and the process will have to be repeated from the start.

If, during programming, the TV button is pressed, the TV button will light for 2.5 seconds and go out. The remote will not have been programmed and the process will have to be repeated from the start.



Controlling a TV

 
 
To control the TV press the **TV** button on the remote control. The **TV** mode-select button will light for one second to indicate that the mode has been set.

 
When any valid function button on the remote is pressed, the **TV** button will light to indicate that a command is being transmitted in TV mode.

Controlling the DVD

To control the DVD press the DVD button on the remote control. The DVD mode select button will light for one second to indicate that the mode has been set.


When any valid function button on the remote is pressed, the TV button will light to indicate that a command is being transmitted in DVD mode.





Using the remote control to control a TV

 In TV mode, the remote can control the following TV functions:

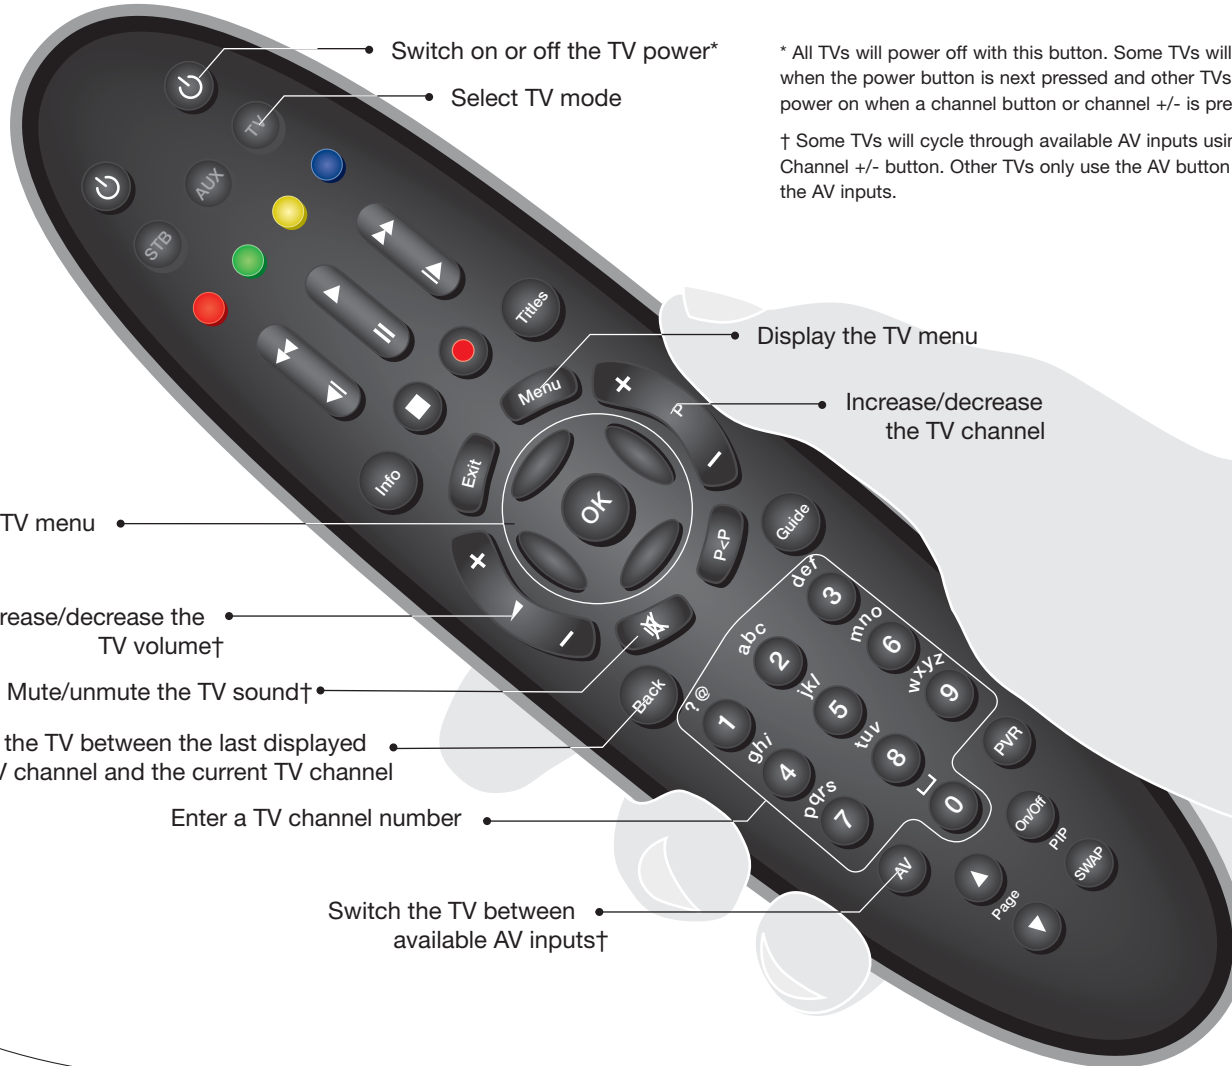

• Switch on or off the TV power*

• Select TV mode

* All TVs will power off with this button. Some TVs will switch on when the power button is next pressed and other TVs will only power on when a channel button or channel +/- is pressed.

† Some TVs will cycle through available AV inputs using the Channel +/- button. Other TVs only use the AV button to access the AV inputs.

• Display the TV menu

• Increase/decrease the TV channel

• Navigate the TV menu

 
• Increase/decrease the TV volume†

• Mute/unmute the TV sound†

• Switch the TV between the last displayed TV channel and the current TV channel

• Enter a TV channel number

• Switch the TV between available AV inputs†



TV brand codes

A.R. Systems 506 550

Abex 098

Acer 041

Acme 373 388

Acura 379 500

ADA 378

ADC 372 374

Admiral 001 099 207 214 370 371
372 386 387 440 514 557

Advent 113 197

Adventura 100

Adyson 373 492 493 527 528

Agashi 492 493

Agazi 372

AGB 448 498

Aiko 015 206 373 374 379 492 493
500 504 506 512 527 528

Aim 506

Aiwa 034 340 662

Akai 002 201 222 333 374 376 378
379 380 408 416 457 463 475 492
493 498 500 504 506 512 528 529
561 567 573

Akiba 380 506 529 540 558

Akito 390

Akura 372 380 417 500 506 529 540

Alaron 492

Alba 373 379 380 392 393 412 416
424 475 492 497 500 505 506 527
529 536 552 557 576 695

Alcyon 513

Alkos 472

Alleron 044

Allorgan 391 493 528 542

Allstar 408 506

America Action 211

Amplivision 373 493 497 528 543 555

Amstrad 372 379 380 395 416 417
440 448 498 500 506 521 529 551

Amtron 036

Anam 211 379 414

Anam National 003 036

Anglo 379 500

Anitech 372 379 403 500 506 513

Ansonic 379 382 496 497 500 503
506 515 536 538 541 556

AOC 004 005 155 201

Apex 074 088 111 119 229

Apex Digital 208 216 334

Apollo 560

Arc en Ciel 404 451 461 545

Arcam 492 493 527 528

Arcam Delta 373

Aristona 408 475 503 506 567

Arthur Martin 555

ASA 370 383 384 385 387 511 516
548

Asberg 403 408 506 513

Astra 379

Asuka 372 373 380 492 493 527 528
529 540

Atlantic 373 408 475 492 506 527
538 543

Atori 379 500

Auchan 555

Audiosonic 373 379 380 408 461 475
493 497 506 528 529 547

AudioTon 373 493 497 528

Audiovox 036 206 211 213 344

Ausind 403 513

Autovox 370 372 373 403 435 450
493 513 528 536 549

Aventura 209

Awa 492 493 502

Ayomi 533

Baird 441 461 493 512 523 524 528

Bang & Olufsen 370

Basic Line 379 380 408 493 500 506
529 540

Bastide 373 493 528

Baur 419 445 456 463 475 501 506
525 549 565

Bazin 493 528

Beko 377 398 424 497 506 636 639
648 682 691

Belcor 155

Bell & Howell 001 045 163 221

Benq 042 136

Beon 408 475 506 557

Best 497 547

Bestar 408 443 497 506

Binatone 373 493 528

Black Star 453 536

Blacktron 540

Blackway 540

Blaupunkt 378 458 525

Blue Sky 380 506 529 540 558 576

Blue Star 446 540

Bondstec 453 536

Boots 373 390 493 528

BPL 446 506 540

Bradford 036 211

Brandt 400 404 405 451 452 461 545
546 582 583

Brinkmann 506 557

Brionvega 370 408 475 506

Britannia 373 492 493 527 528

Brockwood 155

Broksonic 114 121 211 214 333 363

Bruns 370 377

BSR 391 455 542

BTC 380 529

Bush 379 380 386 389 390 392 393
408 412 416 443 446 455 456 461
474 475 476 493 500 505 506 528
529 540 542 549 552 566 576 609
668 688

Candle 004 007 100 155 201

Capsonic 372

Carena 506 558

Carnivale 201

Carrefour 392 505 511

Carver 205

Cascade 379 500 506

Cathay 408 475 506

CCE 493

Celebrity 002 199

Celera 216

Centurion 156 408 475 506

Century 370 536

CGE 403 453 455 497 513 536 557

Changhong 216

Cimline 379 393 500 529

Citizen 004 007 015 036 073 097 155
163 201 206 362

City 379 500

Clarion 211

Clarivox 475

Clatronic 372 373 379 380 395 403
408 424 453 493 497 500 506 513
515 528 529 536 543

CMS 492 493

Colortyme 004 155

Colt 358

Commercial Solutions 202

Concerto 004 155

Concorde 379 500

Condor 373 408 424 492 497 500
506 515 527 536 540 543 556

Contec 211 373 379 392 394 395
492 500 502 505 519 527

Contec/Cony 002 011 012 036

Continental Edison 400 404 405 441
451 461 545

Cosmel 379 500 547

Craig 036 211

Crosley 205 370 403 453 455 513
536

Crown 036 053 211 379 403 408 424
475 497 500 506 513 557 568

CS Electronics 373 380 453 492 527
529 536

CTC 382 453 536

Curtis Mathes 000 004 005 014 045
073 097 154 155 163 201 202 205
207 213 220 221 222

CXC 036 211

Cybertron 380 529

Daewoo 002 004 005 013 015 016
097 106 135 155 193 206 213 259
362 373 379 408 410 432 443 487
492 493 500 506 527 528 529 564
592 610 640 708

Dainichi 380 492 527 529

Dansai 372 408 475 492 493 504 506
527

Dantax 398 427 475 476 497

Dawa 506

Daytron 004 097 155 379 500

De Graaf 376 386 397 508 532

Decca 373 374 390 395 408 448 475
493 498 506 512 528

Dell 141 142 146

Denon 220

Desmet 408 475 506 543

Diamant 506

Diamond 492

Dimensia 000 154

Dixi 379 408 475 493 500 506

DTS 379 500

Dual 373 428 450 451 455 461 470
493 506 528 538 549 550 566

Dual-Tec 373 379 455 528 538

Dumont 155 200 370 373 382 384
385 493 511 515 528

Durabrand 198 209 210 211 214

Dux 475

Dwin 207

Dynatron 408 475 506

Elbe 440 493 496 497 498 506 529
533 538 541 556 572

Elcit 370 498 515 536

Electa 446

ELECTRO TECH 379

Electroband 002 199

Electrograph 218

Electrohome 002 003 004 018 021
155

Elektra 540

Elin 373 383 385 408 475 492 500
506 516 527 549

Elite 380 408 506 529

Elman 382 455 515

Elta 379 492 500

Emerson 004 005 011 013 025 031
033 036 044 045 080 097 102 107
155 163 191 209 210 211 214 221
337 362 363 370 452 463 497 506
511 521 536

Emperor 540

Envision 004 155 201

Epson 217

Erres 408 475 503 506

ESA 209

ESC 493

Etron 379

Euro-Feel 372 493

Euroline 427 466 475

Euroman 492 493 497 540

Euromann 372 373 408 506 527 528

Europhon 373 382 390 408 448 455
492 493 498 506 515 528 536

Expert 538 555

Exquisit 506

Fenner 379 443 500

Ferguson 399 400 407 409 422 441
452 471 475 523 524 533 546 606

Fidelity 373 386 416 492 506 527

Filsai 493

Finlandia 376 386 548

Finlux 370 373 374 382 383 384 385
403 408 448 455 474 475 493 498
506 511 512 513 515 516 522 528
548 556

FIRST LINE 373 379 391 408 412 453
Firstline 492 493 500 506 512 515
527 528 533 536 542 544 549 556
576

Fisher 043 045 047 103 157 163 221
370 373 376 385 392 394 401 424
455 493 497 505 509 512 519 528
549

Flint 408 506 512 529 558

FNR 515

Formenti 370 371 373 403 450 455
457 475 492 513 527 543

Fortress 370 371 514

Fraba 497 506

Friac 497

Frontech 372 379 386 387 416 445
453 493 500 536 549

Fujitsu 029 044 308 309 310 311 374
493 512 515 528

Funai 036 044 046 209 211 317 357
372 391 522 542

Futuretech 036 211

Galaxi 506 515

Galaxis 497 506 515 557

Galaxy 424

Gateway 038 218 223

GBC 379 392 455 500 529

GE 000 002 003 004 008 021 048
049 063 068 070 143 144 154 155
202 203 210 213 281 359 360

Geant Casino 555

GEC 373 374 387 402 408 448 456
463 475 493 498 506 507 512 528
549

Geloso 379 386 455 500 536

General 559

General Technic 379 500

Genexxa 380 387 408 506 529

Giant 493

Gibraltar 155 200 201

GoldHand 492

Goldline 506

Goldstar 004 005 011 018 050 090
091 097 098 155 201 210 361 373
379 381 386 408 425 431 453 455
475 476 492 493 494 497 500 506
527 528 536 554

Goodmans 372 374 379 392 393 408
416 431 441 443 452 475 493 494
498 500 504 505 506 512 522 528
561 564 567

Gorenje 424 497

GPM 380 529

Graetz 387 463 464

Granada 373 374 376 386 392 396
401 403 408 413 448 452 457 460
475 493 498 503 505 506 509 512
513 517 528 531 546 553 555 560

Grandin 379 380 446 475 540

Gronic 493

Grundig 378 384 403 430 435 442
444 458 459 497 506 511 513 525
567 585 646

Grunpy 036 044 211

Haier 198

Halifax 372 373 492 493 527 528

Hallmark 004 155 210

Hampton 373 492 493 527 528

Hanseatic 373 377 379 391 392 408
445 455 463 475 493 496 497 500
506 528 540 541 542 543 549 566

Hantarex 379 448 498 500 506

Hantor 506

Harley Davidson 357

Harman/Kardon 205

Harvard 036 211

Harwood 500 506
 Havermy 207
 HCM 372 373 379 446 493 500 506
 528 529 540 557
 Hello Kitty 213
 Hema 493 500 528
 Hemmermann 549
 Hifivox 461
 Higashi 492
 HiLine 506
 Hinari 376 379 380 392 403 408 475
 500 505 506 522 529 552
 Hisawa 380 446 529 540 555 558
 Hisense 112 215
 Hitachi 002 004 011 012 030 051 084
 085 086 102 132 133 134 155 220
 225 231 316 320 323 326 328 329
 331 357 373 374 383 386 387 388
 392 397 402 404 405 406 426 445
 448 455 457 460 461 462 463 464
 465 493 498 505 506 507 508 512
 516 518 528 530 532 549 553 560
 562 564 610 633 635 656 658 659
 694
 Hornyphon 408
 Hornyphone 506
 Hoshai 380 529 558
 Huanyu 373 443 492 527
 Hygashi 373 492 493 527 528
 Hyper 373 379 453 455 492 493 500
 527 528 536
 Hypson 372 373 408 446 475 493
 506 528 540 555 558
 Iberia 506
 ICE 372 373 379 380 408 416 492
 493 500 506 527 528 529
 ICeS 492 527 529
 IMA 036
 Imperial 387 403 408 424 453 455
 497 506 513 536 549 557
 Indesit 389 435
 Indiana 408 475 506

Infinity 053 205
 Ingelen 387
 Ingersol 379 500
 Inno Hit 373 374 379 380 408 431
 448 475 493 494 498 500 506 512
 513 528 529 536
 Innovation 372 379 415 416 441 443
 476 478
 Inteq 200
 Interactive 497
 Interbuy 379 453 500 536
 Interfunk 370 387 408 453 461 463
 475 497 503 506 539 565
 International 492
 Intervision 372 373 382 493 497 506
 515 528 529 536 540 554 558 566
 Irradio 379 380 408 416 475 494 500
 506 513 529 536
 Isukai 380 506 529 540
 ITC 373 455 493 528
 ITS 380 408 416 446 492 506 527
 529 540
 ITT 379 387 396 456 457 463 464
 522 548 549 560 561
 ITV 379 427 475 476 506 536
 Janeil 100
 JBL 053 205
 JC Penney 000 002 004 005 007 012
 021 048 049 058 063 068 072 073
 075 097 098 154 155 194
 JCB 002 199
 JEC 472 504
 Jensen 004 155 197
 JVC 002 011 012 026 049 054 055
 080 117 130 131 204 261 341 392
 408 416 422 505 510 523 524 529
 570 575 666 669 686 689
 Kaisui 373 379 380 446 492 493 500
 506 527 528 529 540 558
 Kamosonic 373
 Kamp 373 492 527

Kapsch 387 538
 Karcher 373 379 383 475 497 506
 515 540 572
 Kawasho 002 004 155 492
 KEC 211
 Kendo 382 386 393 440 497 506 515
 536 556 572
 Kennedy 455
 Kenwood 004 018 155 201 349
 KIC 493
 Kingsley 373 492 527
 KLH 216
 Kloss Novabeam 036 056 057 100
 Kneissel 496 497 506 533 538 541
 556
 Kolster 408 506
 Konka 219 380 529
 Korpel 408 475 506
 Korting 370 497 543
 Kosmos 506
 Koyoda 379
 KTV 036 097 161 201 211 373 493
 Kyoto 492 493
 Lasat 497
 Lenco 379 500
 Lenoir 373 379 500
 Lesa 453 536
 Leyco 372 374 391 408 475 506 512
 542 568
 LG 005 210 373 379 381 386 408
 425 427 431 453 455 466 475 476
 492 493 494 497 500 506 527 528
 536 554 652 657 677 687 696 706
 LG/GoldStar 677
 Liesenk 475
 Liesenkotter 506
 Life 372 379 415 416 441 443 476
 478
 Lifetec 372 379 415 416 441 443 476
 478 500 506 529 566 576
 Lloyd's 357 500

Loewe 053 433 434 496 497 498 506
 541 565 588 630 634
 Loewe Opta 370 408 475
 Logik 001 395 502
 Luma 386 463 475 500 506 538 556
 Lumatron 386 408 463 475 493 506
 528 538
 Lux May 408
 Luxman 004 155
 Luxor 373 386 406 431 435 456 460
 463 493 494 549 553 561 563
 LXI 000 004 045 053 058 068 075
 154 162 163 202 205 208 210 221
 M Electronic 373 379 383 385 387
 400 408 416 443 461 475 561 563
 Magnadyne 370 382 448 453 455
 475 498 515 536
 Magnafon 373 382 403 448 492 498
 513 515 527
 Magnasonic 362
 Magnavox 004 007 018 053 056 057
 059 060 110 147 155 164 169 195
 201 205 232 233 312 357
 Magnin 359
 Magnum 372 379 415 416 441 443
 476 478
 Majestic 001
 Mandor 372
 Manesth 372 373 393 408 475 493
 504 506 528 542 543
 Marantz 004 051 053 155 165 201
 205 313 408 475 506
 Marelli 370
 Mark 408 475 492 493 500 506 527
 528
 Masuda 493
 Matsui 373 374 379 386 390 391 392
 393 395 408 412 416 430 448 472
 475 493 498 500 502 504 505 506
 509 512 521 525 528 542 546 549
 551 552 558 567 568
 Matsushita 212 414

Maxent 218
 McMichael 402 507
 Mediator 408 475 503 506 567
 Medion 372 379 415 416 443 476
 478 506 576
 Megatron 004 051 210 220
 M-Electronic 492 493 500 506 516
 527 528 536 548 556 565
 Melvox 555
 Memorex 001 004 005 022 045 046
 163 210 214 221 351 361 379 500
 Memphis 374 379 500 512 547
 Mercury 500 506
 Metz 370 418 458 467 468 525 534
 539
 MGA 002 004 005 018 021 047 061
 155 166 201 210 359
 Micromaxx 372 379 415 416 441 443
 476 478
 Microstar 372 379 415 416 441 443
 476 478
 Midland 049 068 097 098 200 202
 203
 Minerva 384 435 458 498 511 513
 525
 Minoka 408 506
 Minutz 048
 Mitsubishi 002 004 005 018 021 032
 047 061 155 166 167 192 207 210
 270 272 313 319 360 370 392 395
 408 434 435 458 505 506 517 551
 565 660 679
 Mivar 373 403 431 448 492 493 494
 495 496 497 498 499 513 527 541
 571
 Montgomery Ward 001
 Motion 403 513
 Motorola 003 099 207
 MTC 004 005 073 155 201
 MTC 456 492 497 549
 Multi System 475
 Multistandard 515

Multitech 036 211 373 379 382 386
 392 403 404 453 455 475 492 493
 497 500 506 515 527 528 536 549
 Multivision 158
 Murphy 373 385 457 492 512 527
 210 463
 NAD 004 058 075 085 160 162 208
 210 463
 Naonis 386 440
 National 413 435 526
 NEC 003 004 005 155 201 392 481
 493 505 520 543
 Neckermann 370 373 378 386 408
 424 445 456 475 493 497 501 506
 528 536 549 556 557 567
 NEI 408 416 475 506 547
 Nesco 453 522 536
 NET-TV 040 218
 Network 547
 Neufunk 500 506 567
 New Tech 379 408 500 506 528 567
 New World 380 529
 NewTech 493
 Nicamagic 373 492 527
 Nikkai 372 373 374 380 408 472 475
 492 493 500 504 505 506 512 527
 528 529 547
 Nikko 004 015 201 206 210
 Nobliko 373 382 384 403 492 511
 513 515 527
 Nogamatic 461
 Nokia 387 396 456 457 463 464 548
 549 560 561 563 573
 Norcent 215 302
 Nordic 493
 Nordmende 370 387 389 400 404
 405 408 441 451 452 461 525
 Nordvision 475
 Novatronic 506 516
 NTC 015 206
 Oceanic 387 463 464 542 555
 Okano 424 497 506 512

ONCEAS 373
 Onwa 036 211 529
 Opera 506
 Optimus 085 160 212 221 351
 Optonica 064 099 207
 Orbit 408 506
 Orion 023 033 107 214 363 379 391
 393 395 408 412 418 448 464 475
 476 498 500 502 506 515 521 542
 543 544 552 636
 Orline 506 529
 Ormond 476
 Orsowe 498
 Osaki 372 373 374 380 473 493 506
 512 528 529
 Osio 494
 Oso 380 529
 Osume 374 394 505 512 519 529
 Otto Versand 371 373 378 392 408
 419 441 445 446 455 456 461 463
 475 493 498 501 505 506 514 525
 528 531 536 542 543 549 565 567
 Pael 373 492 527
 Palladium 373 381 424 493 497 501
 506 528 536 549 556 557 567
 Palsonic 493
 Panama 372 373 379 473 492 493
 500 506 527 528 536
 Panasonic 003 010 046 049 053 096
 123 140 152 203 212 226 235 242
 246 247 248 250 258 265 271 273
 274 291 292 322 336 339 346 348
 350 351 364 365 366 367 369 387
 413 414 415 435 449 463 464 467
 468 482 489 498 506 526 531 537
 574 580 587 594 598 600 602 619
 625 632 644 680 701
 Panavision 506 556
 Pathe Cinema 373 455 492 496 497
 527 533 541 543 549 555
 Pathe Marconi 404 405 451 461 545
 Pausa 379 500

Penney 201 202 203 208 210 359
 361
 Percio 374 492 506 512 543
 Perfekt 506
 Philco 003 004 005 007 011 018 053
 056 057 059 155 164 201 205 370
 403 453 455 497 506 513 536 557
 Philharmonic 373 473 493 528
 Philips 003 007 011 017 018 053 056
 057 059 063 095 126 129 148 155
 168 169 170 205 228 232 233 263
 264 275 276 277 280 338 347 370
 373 402 403 408 427 428 441 443
 455 463 469 475 490 491 503 506
 507 567 579 581 584 586 590 593
 595 596 597 604 608 611 612 613
 616 617 620 627 641 647 649 654
 663 674 683 685 690
 Philips Magnavox 148 228 232 233
 264
 Phoenix 370 408 475 492 497 506
 512 527 543
 Phonola 370 408 475 492 503 506
 527 567
 Pilot 097 155 201
 Pioneer 004 035 085 102 155 160
 171 172 173 196 268 387 400 408
 461 475 497 506 703
 Plantron 372 408 500 506
 Plasmsync 313
 Playsonic 493 528
 Polaroid 216 298
 Poppy 379 500
 Portland 004 005 015 097 155 206
 Prandoni-Prince 386 448 463 498
 513 536
 Precision 373 473 493 528
 Price Club 073
 Prima 113 197 379 387 500
 Prinz 406 512 549
 Prism 049 203
 Profex 379 403 463 500

Profilo 476
 Profi-Tronic 408 506 515
 Proline 374 408 412 503 506 512 544
 Proscan 000 008 068 154 202
 Prosonic 373 475 476 492 493 497
 506 526 527 568
 Protech 372 373 379 382 408 453
 455 456 473 475 493
 Proton 004 011 155 174 210
 Provision 475 476 506 564
 Pulsar 155 200
 Pye 408 416 475 503 506 567 653
 693
 Pymi 379 500
 Quandra Vision 555
 Quasar 003 039 046 049 062 069 161
 175 203 212 351 453
 Quelle 372 373 383 384 385 391 395
 408 419 453 455 458 463 475 476
 493 494 501 502 505 506 511 516
 519 525 528 536 549 565
 Questa 392 505
 Radialva 506 529
 Radio Shack 000 045 163 221
 Radio Shack/Realistic 004 011 036
 045 064 097 098 154 155 163
 Radiola 408 475 493 503 506 567
 Radiomarelli 370 448 453 498 506
 536
 RADIONETTE 383 385
 RadioShack 201 202 210 211 357
 506
 Radiotone 377 408 497 500 506 557
 568
 Rank 384 392 511
 RBM 384
 RCA 000 143 281 283
 RCA 000 003 004 005 008 018 028
 052 065 067 068 071 076 082 102
 104 106 108 115 143 151 154 155

176 177 178 179 196 202 224 262
 281 283 330 335 342 359 360 396
 Realistic 000 045 163 201 210 211
 221
 Recor 506
 Rediffusion 463
 Redstar 506
 Reflex 506
 Revox 408 475 497 506
 Rex 372 386 387 440 536 538 556
 RFT 370 377 496 497 512 541
 Rhapsody 492
 R-Line 408 475 506
 Roadstar 372 379 380 500 529 557
 698
 Robotron 370
 Rowa 492 493
 Royal Lux 497
 RTF 370
 Runco 200 201
 Saba 370 387 400 404 405 410 441
 448 451 452 461 463 464 498 546
 582 583 684
 Sagem 558 572
 Saisho 372 373 379 393 395 448 493
 498 500 502 521 528 551
 Salora 386 387 396 406 431 440 445
 455 456 460 463 494 498 549 553
 Sambers 382 403 448 498 513 515
 Sampo 004 097 098 120 155 201 218
 Samsung 004 005 011 014 018 019
 072 073 078 094 097 098 155 180
 201 210 222 244 269 307 324 343
 354 368 285 288 289 290 294 295
 301 305 307 343 368 372 373 374
 379 395 408 424 429 431 437 438
 470 473 475 477 488 492 493 494
 497 500 506 512 527 528 567 569
 614 618 631 637 642 705
 Sandra 373 492 493 527 528
 Sansui 023 107 122 214 234 333 357
 363 408 506

Sanyo 045 103 155 157 163 166 181
 182 221 318 359 373 374 376 383
 385 392 394 395 396 401 403 452
 455 470 492 493 496 497 500 502
 505 509 512 519 527 528 541 624
 676 678 700
 SBR 402 475 503 506 567
 SCHAUB LORENTZ 387 463 464
 Schaub Lorenz 549
 Schneider 373 380 408 416 417 450
 455 461 470 475 478 493 503 506
 528 529 536 538 549 550 566 567
 576 655 671 673 681
 Scotch 004 210
 Scott 004 011 033 036 044 155 210
 211
 Sears 000 002 004 012 018 044 045
 047 055 058 068 075 103 105 154
 155 157 162 163 183 184 202 205
 208 209 210 221 357 361
 SEG 372 373 382 392 403 427 453
 455 475 492 493 500 505 506 517
 527 528 536 576
 SEI 498 501 506 515 542 549
 SEI-Sinudyne 370 382 387 391 418
 448 498 521
 Seleco 386 387 392 440 455 538 556
 Sencora 379 500
 Sentra 472 500 504 529
 Serino 492 558 572
 Sharp 004 009 011 025 032 064 077
 092 097 099 138 153 155 185 186
 190 207 245 282 286 293 296 371
 375 392 394 411 483 484 498 505
 510 514 519 542 591 603 623 626
 650 664 675 702
 Sheng Chia 707
 Shogun 155
 Shorai 391 522 542
 Siarem 370 382 448 455 498 506 515
 519 525
 Siemens 378 394 458
 Sierra 408 503 506 567

Siesta 470 497
 Signature 001 187
 Silva 492 527
 Silver 392 505 522
 Simpson 007
 Singer 370 382 453 455 515 536 555
 Sinudyne 370 382 391 393 418 455
 475 498 501 506 515 521 542 549
 Skantic 387 460 553
 Sogera 543
 Solavox 387 512
 Sonitron 376 396 493 497 528
 Sonoko 372 373 379 408 475 493
 500 506 528 540
 Sonolor 376 387 501 555
 Sontec 408 470 475 497 506 542
 Sony 002 037 109 128 137 199 227
 230 236 240 251 255 279 284 287
 304 306 327 332 356 357 374 379
 392 394 395 419 439 452 454 473
 479 480 501 502 505 515 577 578
 589 599 605 615 629 643 661 667
 699
 Sound & Vision 380 382 515 529
 Soundesign 004 007 036 044 155
 210 211
 Soundwave 408 475 506 543 557
 Squareview 105 209
 SSS 036 155 211
 Standard 373 379 380 408 473 493
 500 506 528 529 543
 Star Lite 500 506
 Starlight 475
 Starlite 036 211
 Stenway 446 529 540
 Stern 386 387 538
 Strato 500 506
 Stylandia 493
 Sunkai 379 391 412 529 542 544 552
 558
 Sunstar 500 506

Sunwood 379 408 500 506
 Superla 373 492 493 498 527
 Superscan 207
 SuperTech 445 492 500 506 527 567
 Supra 379 500
 Supre-Macy 100
 Supreme 002 199
 Susumu 380 546
 Sutron 379 500
 Sydney 373 473 492 493 527 528
 Sylvania 004 007 018 027 046 053
 056 057 059 060 124 145 150 155
 164 169 188 201 205 209 260 337
 Symphonic 024 031 036 105 209 211
 357
 Sysline 475
 Sytong 492 527
 Tandberg 391 547 556
 Tandy 099 207 371 373 374 380 387
 457 473 493 512 514 528 529 536
 Tashiko 373 386 392 402 473 492
 493 505 507 520 527 528
 Tattung 003 223 373 374 390 408 448
 473 475 493 498 502 506 512 528
 TCM 372 379 415 416 441 443 476
 478
 Teac 493 506 558 565
 Tec 373 379 453 455 457 473 493
 500 528 536 546 547 559
 Technema 543
 Technics 049 203 212 414
 Techwood 004 049 155 203
 TEDELEX 493
 Teknika 001 002 004 005 007 011
 012 015 036 044 060 073 096 097
 155 205 206 211
 Teleavia 400 404 441 451 461 545
 Telecaption 159
 Telecor 493 506 528 529 538

Telefunken 222 399 400 407 408 409
 420 421 435 440 441 451 452 461
 471 486 506 546 559 697 704
 Telegazi 506 529 538
 Telemeister 506 543
 Telesonic 506
 Telestar 506
 Teletech 379 427 453 475 500 506
 536 547
 Teleton 373 445 456 473 493 505 528
 538 539 549
 Televideon 492 527 543
 Televiso 555
 Temco 542
 Tensai 379 380 385 391 408 493 500
 506 516 528 529 536 542 543 554
 Tenson 543
 Tesmet 408
 Tevion 372 379 415 416 441 443 476
 478
 Texet 373 473 492 493 500 528
 Thomas 357
 Thomson 373 400 404 405 407 408
 409 410 435 436 441 451 452 461
 471 481 506 545 546 559 582 583
 607 707
 Thorn 374 385 399 422 441 452 463
 472 475 506 523 524 533 546 564
 565
 TMK 004 155 210
 TNCi 200
 Tokai 374 408 493 506 512 528 547
 Tokyo 373 492 504 527
 Tomashi 446 540
 Toshiba 006 045 058 073 075 079
 083 087 093 101 116 127 159 162
 163 183 208 221 237 238 239 241
 243 249 252 253 256 257 266 267
 300 313 315 321 325 333 345 353
 354 355 384 392 423 442 472 485
 493 504 505 511 515 535 601 621

622 628 638 645 651 665 670 672
 692
 Totevision 097
 Towada 387 455 493 515 549
 Trakton 493
 Trans Continens 493 506 528
 Transtec 492
 Trident 473 493 498 528
 Tristar 529
 Triumph 423 448 498 506 521 535
 548 567
 TVS 214
 Uher 387 403 408 497 506 513 538
 543 557
 Ultravox 370 373 382 453 455 457
 492 506 515 527 536
 Unic Line 506 560
 United 427 475
 Universal 048 063
 Universum 372 383 385 408 424 436
 447 453 455 475 493 494 497 501
 502 505 506 511 513 516 519 521
 525 528 536 542 547 548 549 556
 557 560 561 563 565 573
 Univox 506 533 547
 Vector Research 201
 Vestel 386 387 408 424 453 455 460
 475 476 493 506 528
 Vexa 379 475 500 506
 Victor 055 204 392 408 414
 VIDEOLOGIC 492
 Videologique 373 380 492 493 527
 528 529
 Videosat 453
 VideoSystem 408 506
 Videotechnic 492 493 527 528 543
 Videoton 553
 Vidikron 205
 Vidtech 004 005 155 210
 Viewsonic 038 149 218 297 299 316

Viking 100
 Visiola 373 492 527
 Vision 408 493 506 543
 Vistar 457
 Vizio 223
 Vortec 408 475 506
 Voxson 370 386 387 403 408 440
 506 513 557
 Waltham 373 457 460 473 493 506
 528 553 557
 Wards 000 001 004 005 018 031 044
 048 053 056 057 059 060 063 064
 154 155 169 189 201 205 210
 Watson 408 475 506 529 543 566
 568
 Watt Radio 373 382 455 492 515 527
 549
 Waycon 208
 Wega 370 392 505 506
 Wegavox 500
 Weltblick 408 475 493 506 543
 Westinghouse 199 213 303
 Weston 455
 White Westinghouse 005 013 214
 373 382 403 475 492 506 527 543
 547
 Windstar 540
 Xrypton 506
 Yamaha 004 005 018 155 201
 Yamishi 493 506 528 529 540 558
 Yokan 506
 Yoko 372 373 379 380 408 473 475
 492 493 497 500 506 528 529
 Yorx 380 529
 Zanussi 386 440 493 528
 Zenith 001 020 081 089 118 125 155
 200 206 210 214 254 278 314 323
 329 352 357 363

DVD brand codes

Advent 163

Aiwa 026 131 134 309 348 466

Akai 146 162 300 340

Akura 388

Alba 409 412 413 431

Alco 160

Alpine 258

Amphion MediaWorks 167 171 264

AMW 167 171

Apex 001 056 057 095 098 145 273 360

Apex Digital 148 178 179 180 183 184 193 195 221 271 301

Aspire Digital 166

Audiovox 132 160 227 263 316

Best Buy 384

Blaupunkt 136 195

Blue Parade 191

BOSE 122 130

Bosston 378

Brandt 370 408 423

Britannia 374

Broksonic 053 054 072 146 300

Bush 003 371 373 382 386 415 431 433 438 486

California Audio Labs 157

Cambridge Audio 376 393

CAT 379 380

Celestial 391

Centrex 389

Centrum 380

CGV 376

CineVision 385

Clarion 100

Classic 101 354

Clatronic 382

Coby 164 165 168

Conia 371

Crypto 387

C-Tech 377

CyberHome 083 405 417 419 429

Daewoo 058 062 137 138 325 326 327 418 456

Dalton 392

Dansai 375

Daytek 264 406

DEC 382

Denon 040 110 133 157 197 202 238 252 254 257 259 335 359 394 459

Denver 352 382 388

Denzel 372

Desay 381

Diamond 376 377

Digitor 390

Disney 194

DK Digital 003 443

Dmtech 323

Dual 372

DVD2000 188

DX 377

Easy Home 384

Eclipse 376

Elta 336 353 427 433

Emerson 059 073 147 194 304 346

Enzer 372

Finlux 376

Fisher 112 134 349

Funai 194

Gateway 272

GE 041 079 118 189 195 255

Global Solutions 377

Global Sphere 377

Go Video 046 124 127 128 129 150 177 185 272 295 299 338

GoldStar 410

Goodmans 382 386 389 404 409 438

GPX 114

Gradiente 157

Graetz 372

Greenhill 195

Grundig 190 341 351 389 430 439

H&B 382 383

Haaz 376 377

Harman/Kardon 125 267 268 365

HiMAX 384

Hitachi 000 027 126 175 200 338 357

372 384 440 450 462 468

Hiteker 193

Humax 448

Initial 195

Innovation 342 343 344 357

Insignia 289

Integra 158 191

Irradio 017

JBL 043

Jensen 165

Jeutech 378

JVC 047 090 096 097 115 174 192

222 240 274 275 276 277 311 332

370 402 449 460 476 488 489 490

491 492 493 494 495

Kawasaki 160

Kenwood 019 039 157 197 202 256 260 261 315 335 363 400

Kingavon 382

Kiss 372 383

KLH 160 195 221

Koda 382

Konka 029

Koss 060 159 170 228

KXD 384

Lasonic 081

Lawson 377

Lecson 375

Lenco 382

Lenoxx 169

LG 059 270 346 407 410 414 451

477 483

Life 342 343 344

Lifetec 342 343 344 357

Limit 377

Liquid Video 170

Lite-On 272

Loewe 341 437 471

LogicLab 377

Luxor 389

Magnavox 002 018 045 051 147 176

187 190 194 370 382 395

Magnum 357

Marantz 034 190 250 350 458 472

Matsui 423

MBO 366

Mediencom 374

Medion 324 342 343 344 357 386

Memorex 003 146

Metz 339

MiCO 376

Micromaxx 342 343 344 357

Micromedia 370

Micromega 401

Microsoft 189

Microstar 342 343 344 357

Mintek 004 195

Mirror 386

Mitsubishi 021 030 123 142 186 188 337 396

Mizuda 382 384

Monyka 372

Mustek 354 404 470

Mx Onda 376

NAD 059 139 364

Naiko 389

Nakamichi 116 368

Nesa 195

Neufunk 372
 Nexxtech 140
 Norcent 005 117 164 168 262
 NU-TEC 371
 Omni 374
 Onkyo 006 024 158 187 235 345 370 395
 Optim 375
 Optimus 398
 Orava 382
 Orion 054
 Oritron 009 159 170 344
 P&B 382
 Pacific 377
 Palsonic 373
 Panasonic 066 075 076 153 154 155 156 157 187 197 202 203 219 225 226 245 246 248 259 279 281 284 303 306 307 308 310 317 318 319 321 335 394 467 474 478 487
 Philips 002 017 018 032 036 045 073 088 091 109 176 187 190 194 206 208 234 237 241 280 283 285 296 313 333 341 350 370 395 401 416 421 422 425 428 436 441 446 447 458 473
 Pioneer 008 016 143 172 191 201 224 236 243 251 282 290 339 398 479
 Polaroid 007 184 221 264
 Polk Audio 190
 Presidian 194
 Proceed 193
 Proline 389
 Proscan 010 033 118 189 233
 Provision 382
 Qwestar 009 159 265
 Raite 372
 RCA 010 042 048 055 063 077 099 107 118 149 152 160 189 191 195 198 210 253 291 294 302 312 355

REC 373 374
 RedStar 388
 Regent 169
 Reoc 377
 Revoy 383
 Roadstar 373 382 455
 Rotel 192
 Rowa 161 371 389
 Rowsonic 380
 Saba 408 423
 Sabaki 377
 Sampo 119 356
 Samsung 012 046 049 074 085 102 150 157 162 175 177 181 185 200 204 218 223 298 314 320 338 403 452 464 480 482
 Sansui 054 071 146 300 376 377
 Sanyo 050 120 134 144 146 426 461
 ScanMagic 404
 Schneider 322 323 324 344
 Scientific Labs 377
 Scott 392 412
 SEG 322 362 372 377 409 420 444
 Sensory Science 272
 Sharp 013 015 044 086 194 207 215 287 297 342 364 463 469
 Sherwood 121 361
 Shinco 355
 Shinsonic 173
 Sigmatek 384
 Silva 388
 Singer 376 377
 Skymaster 353 354 377 420
 Skyworth 388
 SM Electronic 377
 Sony 014 020 022 065 068 069 070 087 103 108 113 173 182 196 199 205 211 213 214 217 229 231 239 278 292 334 399 411 424 432 434 442 445 466 475 481

Soundmaster 377
 Soundmax 377
 Standard 377
 Star Cluster 377
 Starmedia 382
 Sungale 269
 Superscan 147
 Supervision 377
 Sylvania 002 064 073 078 092 147 194 304
 Symphonic 002 194
 Synn 377
 TCM 342 343 344 357
 Teac 160 266 339 371 377 465
 Tec 388
 Technics 157 202 394
 Techwood 141
 Telefunken 380
 Tevion 342 343 344 357 377 392
 Theta Digital 191
 Thomson 328 329 330 331 369 397 408 457 484
 Tokai 372 388
 Toshiba 023 025 037 038 054 080 084 088 093 094 135 146 151 187 209 212 216 220 230 232 244 247 249 293 288 293 300 305 333 370 395 453 454 485
 TruVision 384
 Urban Concepts 187
 Venturer 011 160
 Vtrek 387
 Wharfedale 347 376 377
 Wintel 378
 Xbox 189 397
 Xlogic 377
 XMS 373
 Yakumo 389
 Yamaha 028 157 190 197 242 286 335 358 389 394 422 435

Yamakawa 367 372
 Yukai 404
 Zenith 052 059 128 187 270 346 370 395